

DC DECORATOR ROCKER SWITCHES

The DC Decorator switch line is designed for DC motorized interior window treatment applications. Both single and double switch stations are single pole, double throw, with center off. The soft contours and coloring of the switches will complement any decor, and they are designed to fit into a standard single gang electrical box.

Description	Catalog Number
DC Rocker Switch (Maintained - Single)	6300922
DC Rocker Switch (Maintained - Double)	6300923
DC Rocker Switch (Momentary - Single)	6300967
DC Rocker Switch (Momentary - Double)	6300968



Cat. No. 6300922



Cat. No. 6300923

STANDARD DC SWITCHES

SOMFY's three-position maintained DC toggle and rocker switches provide convenient fingertip control of any DC controlled window treatment in your installation. These switches feature up, down, and center stop positions, and are the maintained type. They mount easily into a standard single gang box.

Description	Catalog Number
DC Rocker Switch (White)	6120694
DC Rocker Switch (Ivory)	6120695



Cat. No. 6120694

5 POSITION DC SWITCHES

SOMFY's five position DC switches are designed to give both maintained and momentary outputs. This is especially useful for tilt control with horizontal blinds. These switches are designed to mount in a single gang electrical box.

Description	Catalog Number
5 Position 2 Speed DC Rocker Switch	6120742
5 Position DC Rocker Switch	6300951



 
Cat. No. 6120742



Cat. No. 6300951

DECORATOR AC SWITCHES


SOMFY'S AC switches are designed for window treatments using SOMFY's AC motor line. The 5 position switches offer both momentary and maintained outputs, with center off. This is especially useful for tilt control with horizontal blinds. These switches mount in a single gang electrical box.



Cat. No. 6120727



 Cat. No. 6120746



Cat. No. 6300924



Cat. No. 6120144

Description	Catalog Number	Description	Catalog Number
5 Position AC Decorator Rocker Switch	6300924	Rocker Switch Kit w/Princess Plate (Maintained - Ivory)	6120144
Decorator Paddle Switch (Maintained - Ivory)	6120726	Rocker Switch Kit w/Princess Plate (Maintained - White)	6120688
Decorator Paddle Switch (Maintained - White)	6120727	Rocker Switch Kit w/Princess Plate (Momentary - Ivory)	6120155
Decorator Paddle Switch (Momentary - Ivory)	6120734	Rocker Switch Kit w/Princess Plate (Momentary - White)	6120689
Decorator Paddle Switch (Momentary - White)	6120735	Rocker Switch Kit w/Standard Plate (Maintained - Ivory)	6120403
Decorator DPDT Paddle Switch (Maintained - White)	6120728	Rocker Switch Kit w/Standard Plate (Maintained - White)	6120404
Decorator DPDT Paddle Switch (Maintained - Ivory)	6120729	Rocker Switch Kit w/Standard Plate (Momentary - Ivory)	6120414
Decorator Toggle Switch (Maintained - Ivory)	6120745	Rocker Switch Kit w/Standard Plate (Momentary - White)	6120415
Decorator Toggle Switch (Maintained - White)	6120746	Rocker Switch Kit w/Alum. Std. Plate (Maintained - White)	6120405
Decorator Toggle Switch (Momentary - Ivory)	6120747	Rocker Switch Kit w/Alum. Std. Plate (Momentary - White)	6120416
Decorator Toggle Switch (Momentary - White)	6120748		